
FINSAUNA®

Solara 600 79D" x 91W" 93H"

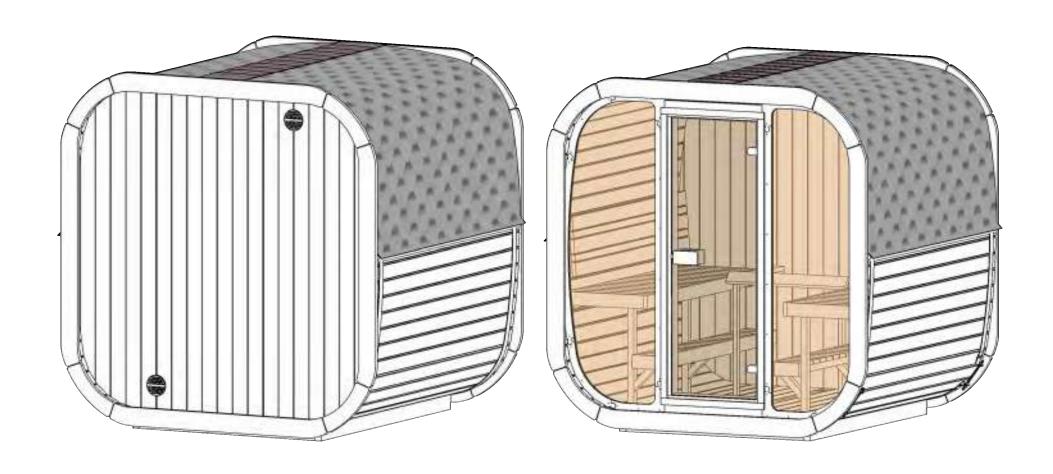

Note: Please read manual before construction

INDEX

- 1.1 Sauna Dimensions
 1.2 Sauna Overview
- **2.** 2.1 Tools
- 3.1 Details list 1

 3.2 Details list 2

 3.3 Details list 3

 3.4 Details list 4


 3.5 Details list 5

 3.6 Details list 6

 3.7 Details list 7


- 4.1 Exterior
 - 4.2 Base frame
 - 4.3 Floor staves
 - 4.4 Front glass-wall assembly
 - 4.5 Back wall assembly
 - 4.6 Front wall installation
 - 4.7 Back wall installation
 - 4.8 Wall staves
 - 4.9 Top staves
 - 4.10 Band installation1
 - 4.11 Band installation + Vent
 - 4.12 Interior
 - 4.13 Benches support installation
 - 4.14 Benches installation
 - 4.15 Heater guard + backrest
 - 4.16 Door installation
 - 4.17 Water diverter installation
 - 4.18 Roof shingles underlay installation
 - 4.19 Roof shingles installation
 - 4.20 Endboards installation
 - Warranty & door info



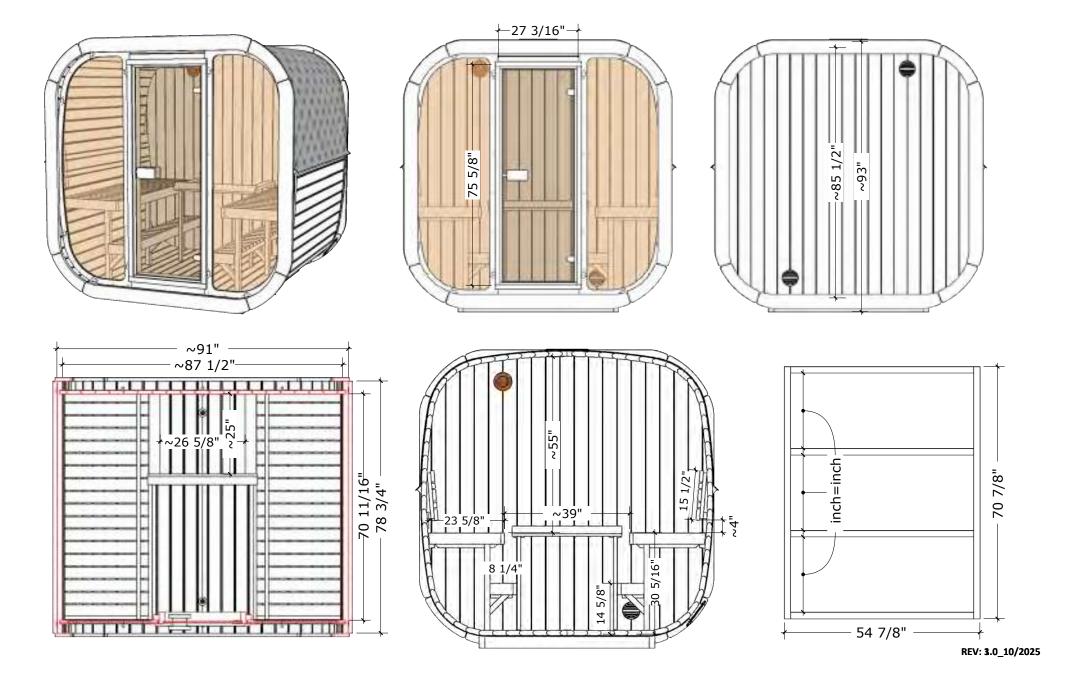




FINS AUNA®

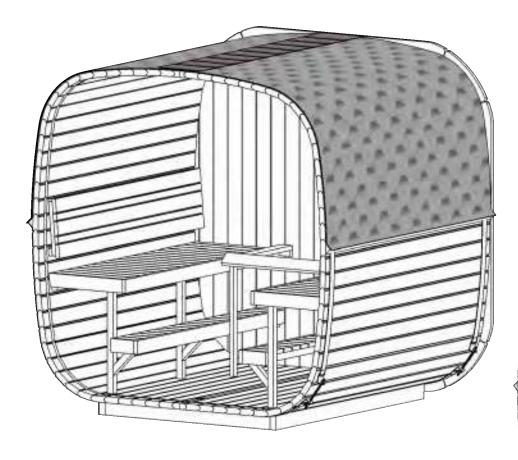



Tools needed

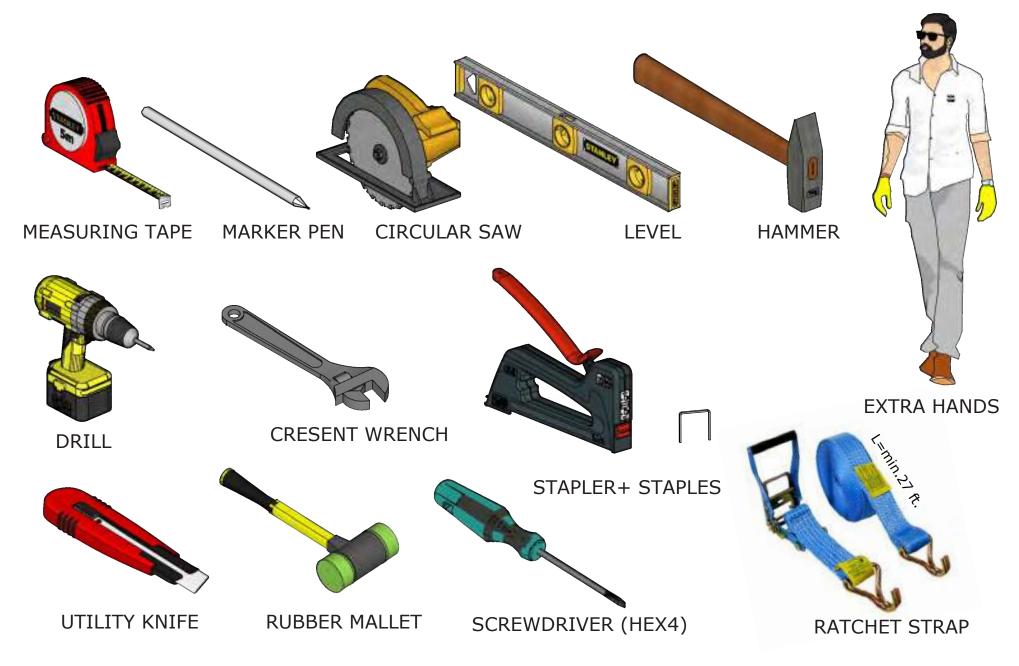

Details list 1/7

x2	70 7/8" *4" *2"	
х4	15"*4"*2"	
	51112	
x1	13" *15 8"	
	78 3 ^{JA"} *4 3J	
x71	2/3" *15/8"	
	78 3/A" * 4 2/	
x2	12"*15 8"	
	78 3/4" *4 2/3	
x2	2"*15/8"	
	18 3 4" * 2 1 3	
		;;
	x4 x1 x71 x2	x1 x1 x1 x8 3 A" *A 2 3" *1 5 8" x2 x2

Details list 2/7

x1	18 314" *X" *1 518"	X ———————————————————————————————————
x1	86 1/4" *30 1/2" *1 1/9"	
x1	861/4"*301/2"*11/9"	
x1	28" *6 4 5" *1 1 9"	
х1	28"*35 7"*11 9"	
x1	1 * A6 2/3" * 1 1/9"	
	x1	x1 x1 x1 x1 x1 x1 x1 x1 x1 x1

Details list 3/7

Part Y2	x1	n" *1 ¹ 9"							
Article.		87" * 12 1/3							
2-TIC26PT/28P									
Part U1	x1	17" *1.119"							
Article.		*351							
KTL94/2200		86 31							
Part U2	x1	*119"							
Article.		162/5" *35/7							
KTL94/1940		164							
Part 10/2	x1	19,1 *2 5/6"							
		70 1/2" *23 5/8" *2 5/6"							
Article.									
2-TLA600/1791V									
Part 10 /1	x1	18" *25 6"							
		70 1/2" *23 5/8" *2 5/6"							
Article.									
2-TLA600/1791P									
Part 11/2	x1	2 5/6"							
		70 1/2" *8 2/7" *2 5/6"							
Article.									
2-TLA210/1791V									

Details list 4/7

			3 1131 +/ /
Part 11 /1	x1	70 1/2" *8 2/7" *2 5/6"	
Article. 2-TLA210/1791P			
Part 10a	x2	214"	
Article. THP44/540XP		21 21 4" *1 314" *1 314"	
Part 10c	х6	** 3 ^{A"}	
Article. THP44/170		62 3"*13 4"*13 4"	
Part 11a	x4	17" *13 4" *13 4"	
Article. THP44/700		27 417" *1.33	
Part 11b	x4	"*1 ³ 1 ⁴ "	
Article. THP44/250XP		9118" *1314" *131	
Part 15a	x2	12"*1119"	
Article. TLAV90/670XP		263/8"*31/2"*11/9"	
Part 15b	x2	*1 ¹ 9"	
Article. TLAV42/90		31/2"*15/8"*11/9"	

Details list 5/7


TLAV42/770 Part 15d x1 *30 11 *30			Details its	
Part 15d x1 Article. TLAV990/870 Part 26 x2 Article. 2-TST394/1760 Part 21 Article. 2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU	Part 15c	x2	18" *1 119"	
Part 15d x1 Article. TLAV990/870 Part 26 x2 Article. 2-TST394/1760 Part 21 Article. 2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU	Article. TLAV42/770		30 113" *1.51"	
Part 26 Article. 2-TST394/1760 Part 21 Article. 2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU		x1	13" *1.119"	
Article. 2-TST394/1760 Part 21 Article. 2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU	Article. TLAV90/870		34 1/4" *3 1/L	
Article. 2-TST394/1760 Part 21 Article. 2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU	Part 26	x2	*15 1/2" *2 1/5"	
2-TST394/1760 Part 21 Article. 2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU	Autiala		69 217	
Part 21 Article. 2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU				
Article. 2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU	2-151394/1760	T	4	
2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU	Part 21	x1	21 1/5	
2-D690/1920PR8M_MU Part 21a x2 Article. KHL44/1890_MU			153/5".	
Part 21a x2 Article. KHL44/1890_MU	Article.			
Article. KHL44/1890_MU Article Ta215" *1314" *517"	2-D690/1920PR8M_MU			
KHL44/1890_MU	Part 21a	x2	M**5 7"	
	Article.		74.215° *1.31°	
Part 21b x2 Article. KHL44/750_MU x2 29 1/2" *1 3/4" *5/1" 29 1/2" *1 3/4" *5/1" Article *1	KHL44/1890_MU			
Article. KHL44/750_MU 29 1 12 1 2 1 2 1 2 1 2 1 2 1 2 1 2 1 2	Part 21b	x2	· *511"	
KHL44/750_MU 29 31 6	Article.		12" *1 31"	
	KHL44/750_MU		29 ³¹ (I	


Details list 6/7

			-
Part 22	x2	183 4"*1"*1"	
Article.		18 ^{3 A}	
TSTL50/2000X			
Part 25a	x8		
Article.			
OL-IC26-01_MU			
Part 25b	x8		
Article.			
OL-IC26-02_MU)	
Underlay felt	39`5"		
Article. KATAL			
Part N	x8		
Article.			
KAT-HAR_MU			
Part O	x61		
Article.			
KAT-SIN_MU			
Part V	x4	*1"	
Article.		24/7" *1 4/7 000	
KI-VIN-25/40/40-ZN		Λ ^[4]	
Part A	x2		~25`7"
Article. 2-VITS7800-KLZN			


Details list 7/7


Part W	x2 kmpl	W2 • W1								
Article.		₩3								
MU-TRAPP		₩4								
Part G	x1									
Article.										
MU-VENT-PU										
Part F	х3									
Article.										
MU-VENT-ZN-MUS										
Article.	x2	D q E q		ticle.						M
KI-KERL-12-RV1			KI-U	SA-125-220M				I	₹ H H	
						. ड्रे K	SI I	1	(Bla	. : ₂
		x2 x2	M	M	Ç	17/ (Black)	½" (B	" x 2"	×2% ×2% ×2% ×14111	×3%
C •¸						/8" x 1	%" × 1%" (Black) mmmmm K" × 1%" K" × 1%"	3/16 " unimum	5/ ₃₂ " × 2¼" (Black) cumming 5/ ₃₂ " × 2¼" cumming 3/ "37"	7,16" × 3,72" • \$
			Bit PH2	Torx bits	Г			₹ 	* *	~
		x1		T10 T15 T20 T25			x25 x25	x30	Ш Ш x70 x210	Ш x80

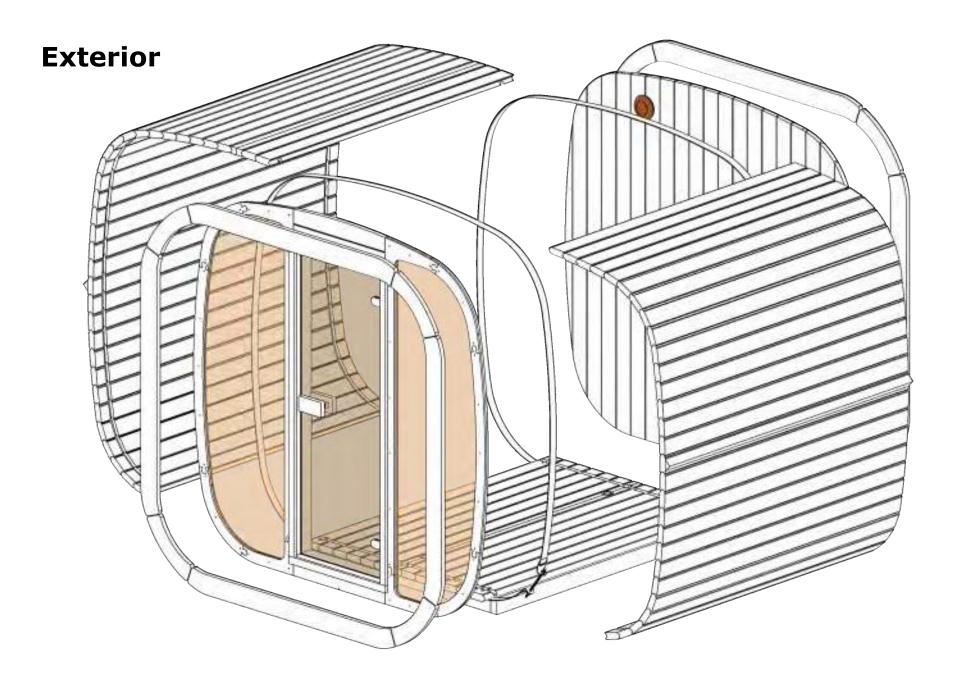

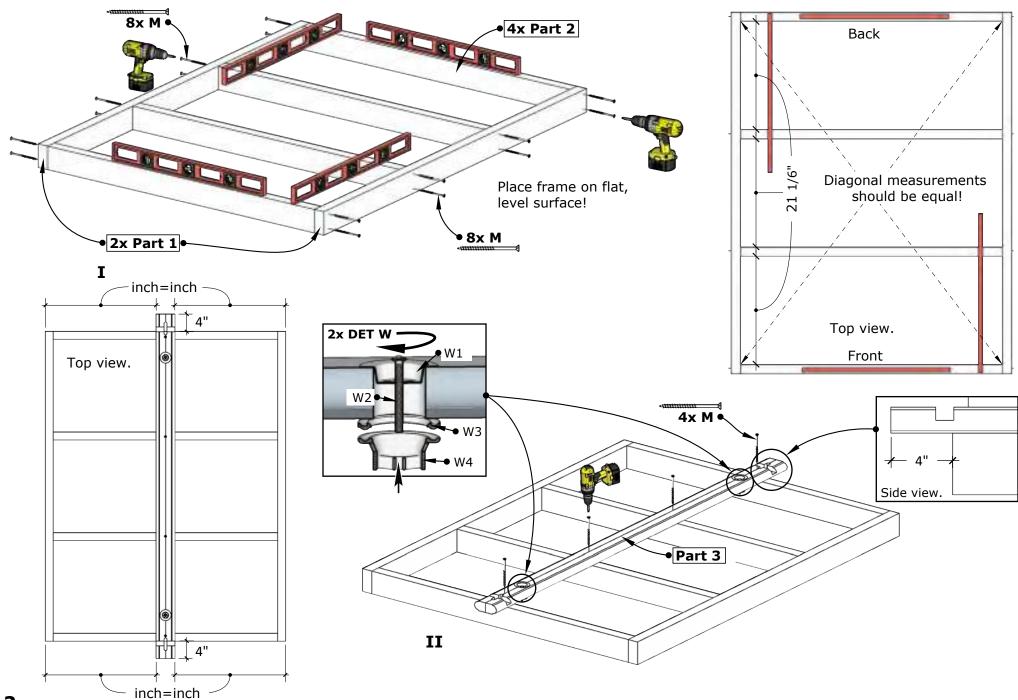



4.2

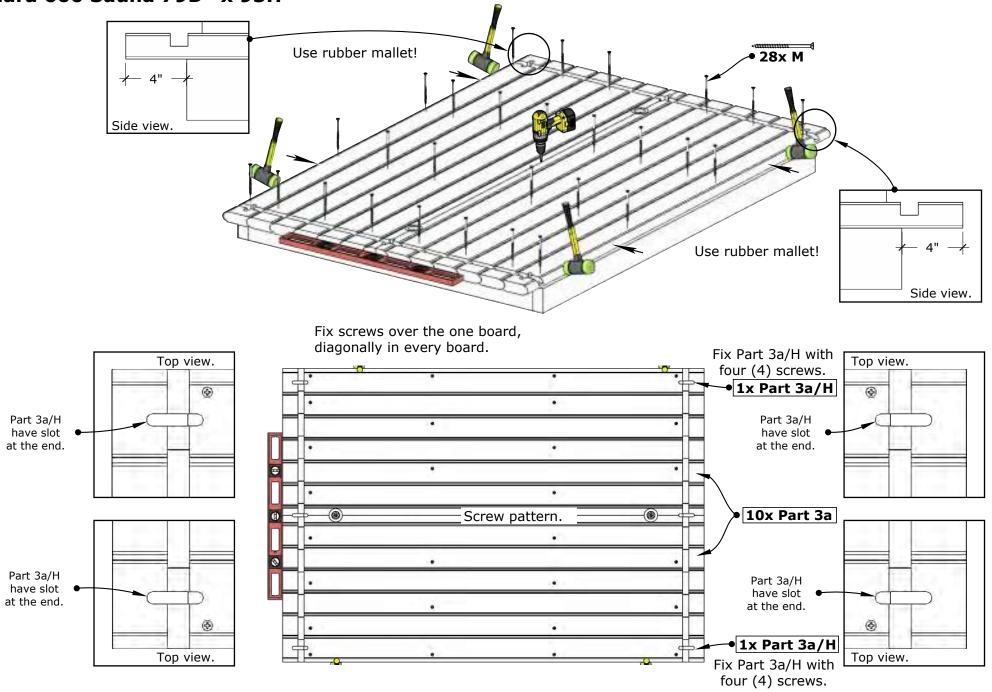


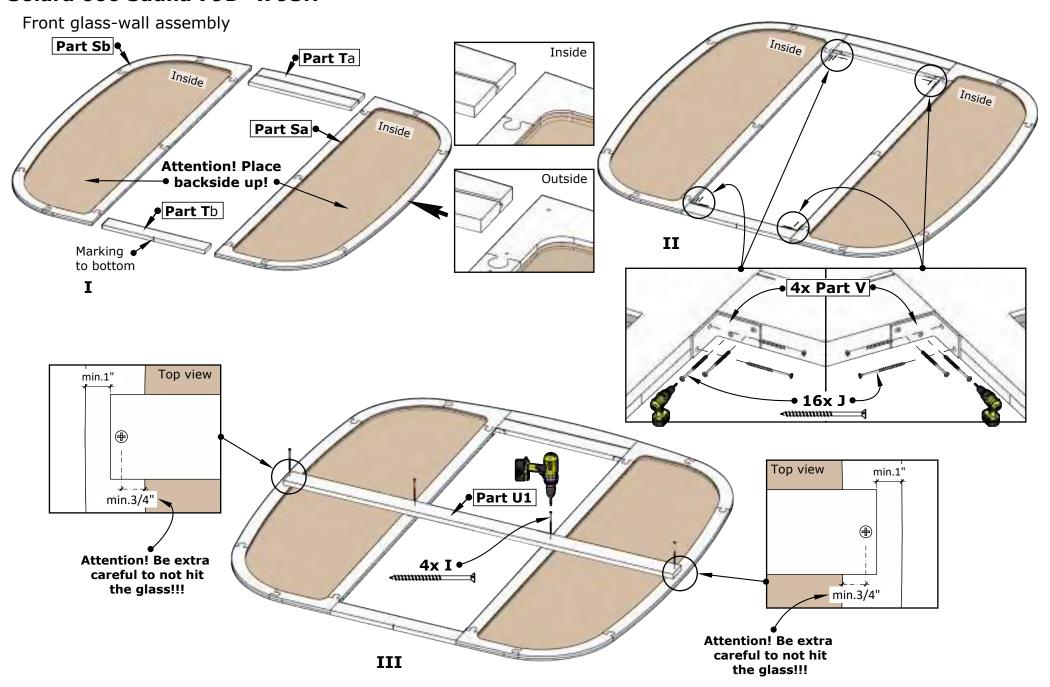



Wooden back wall assembly

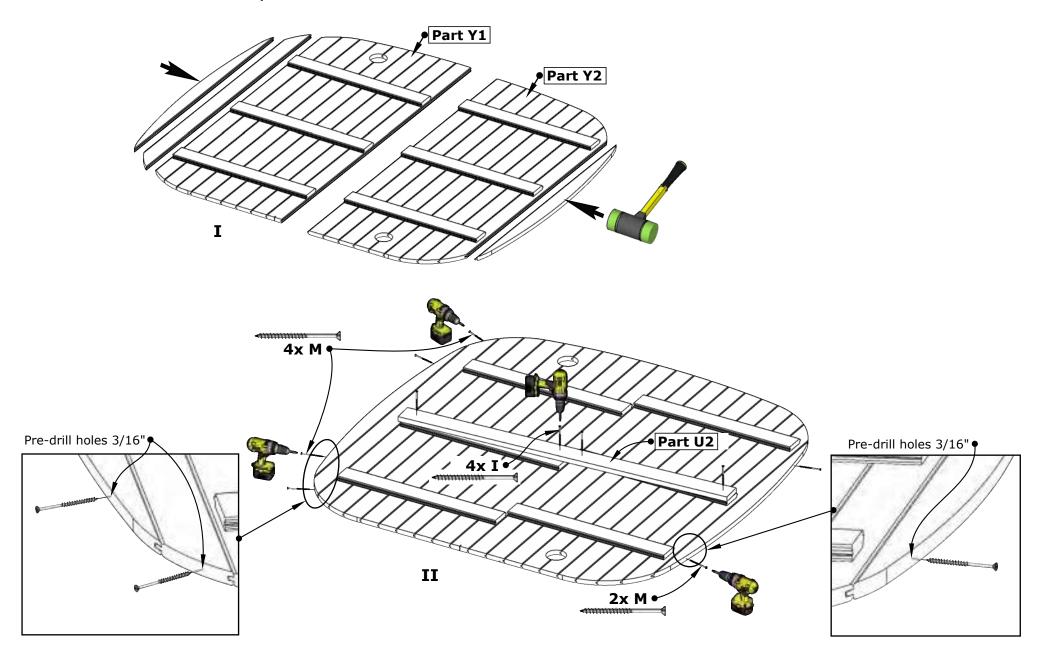


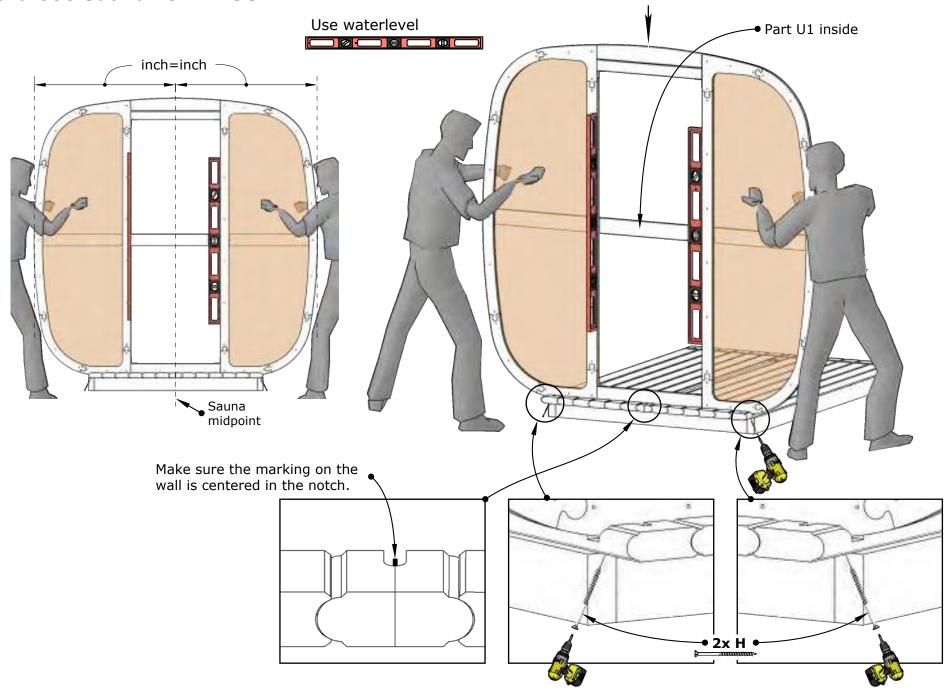


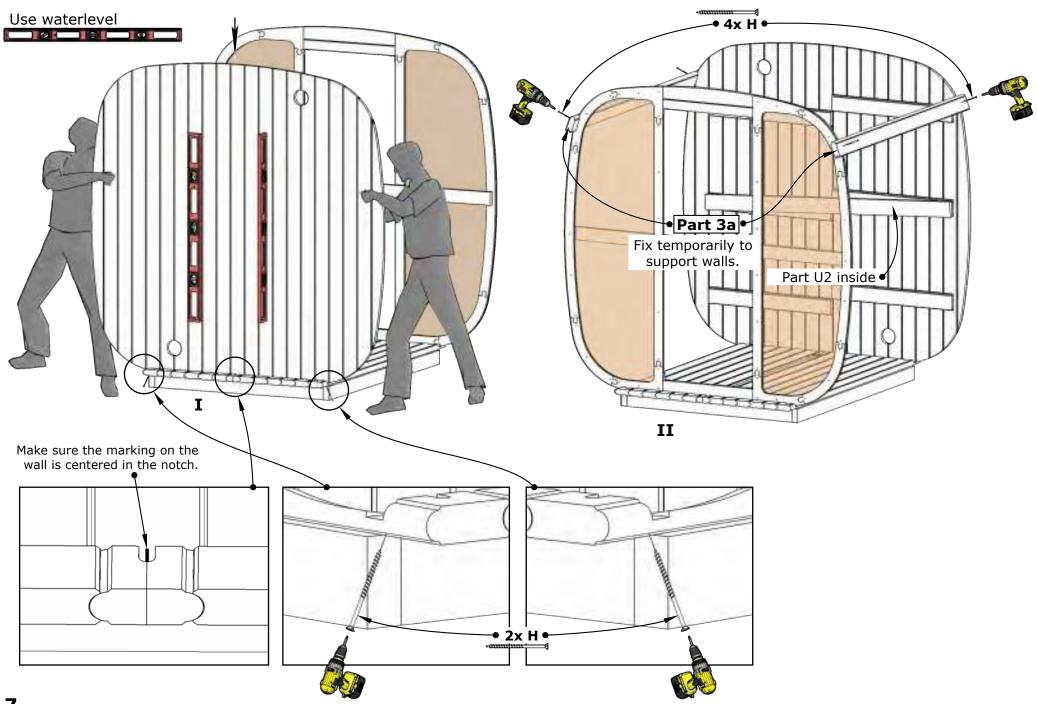


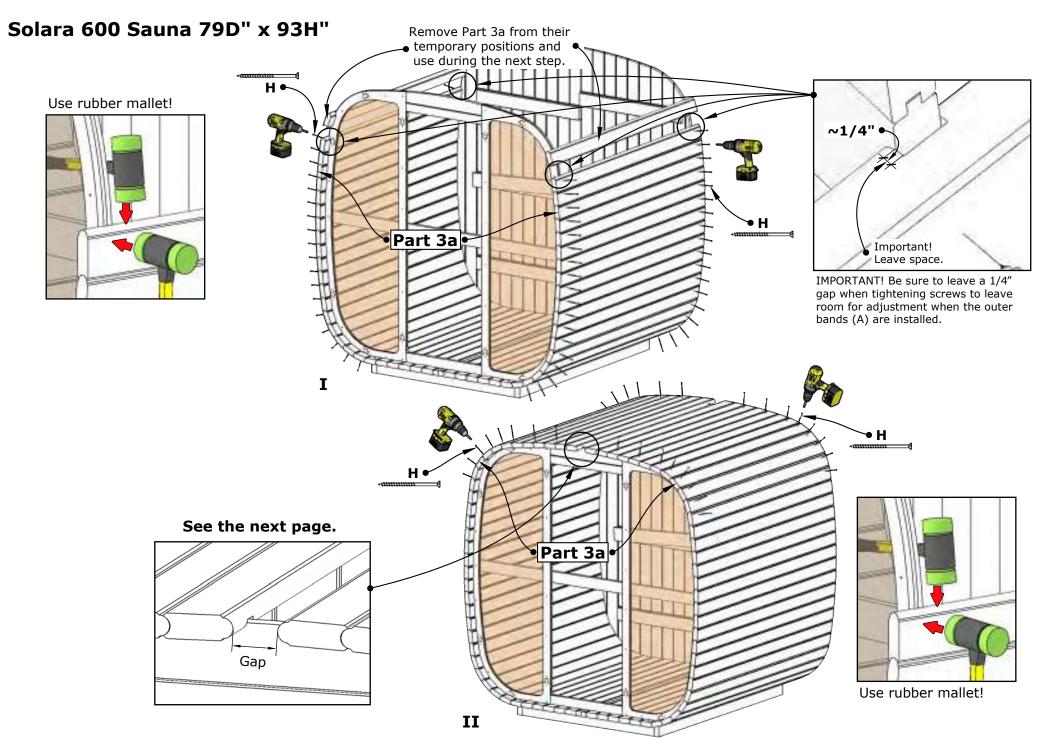

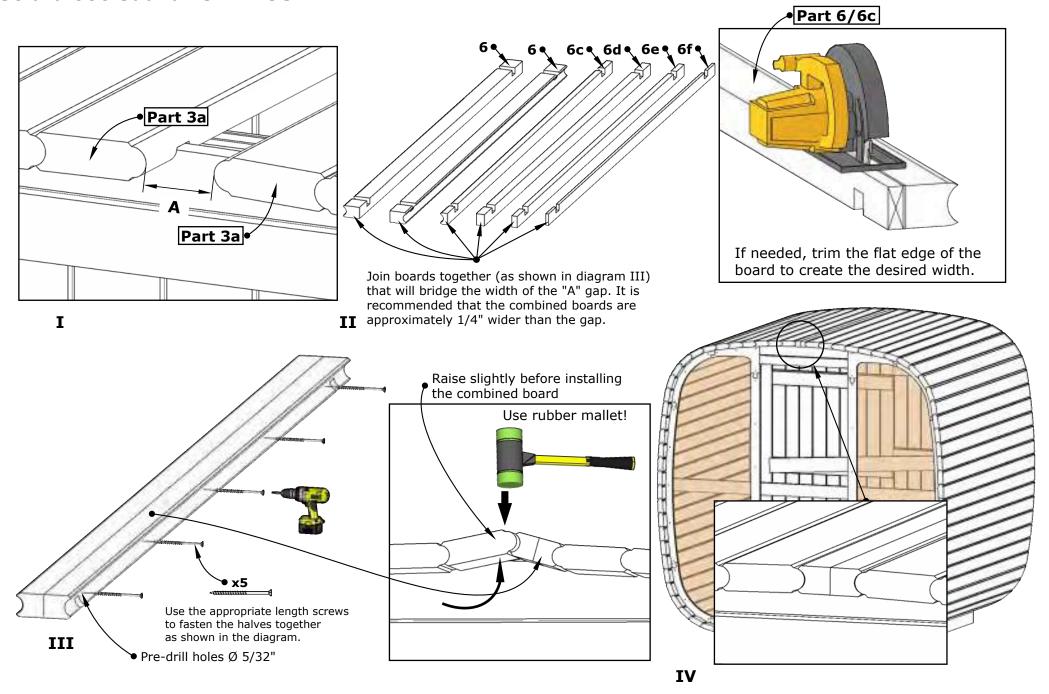


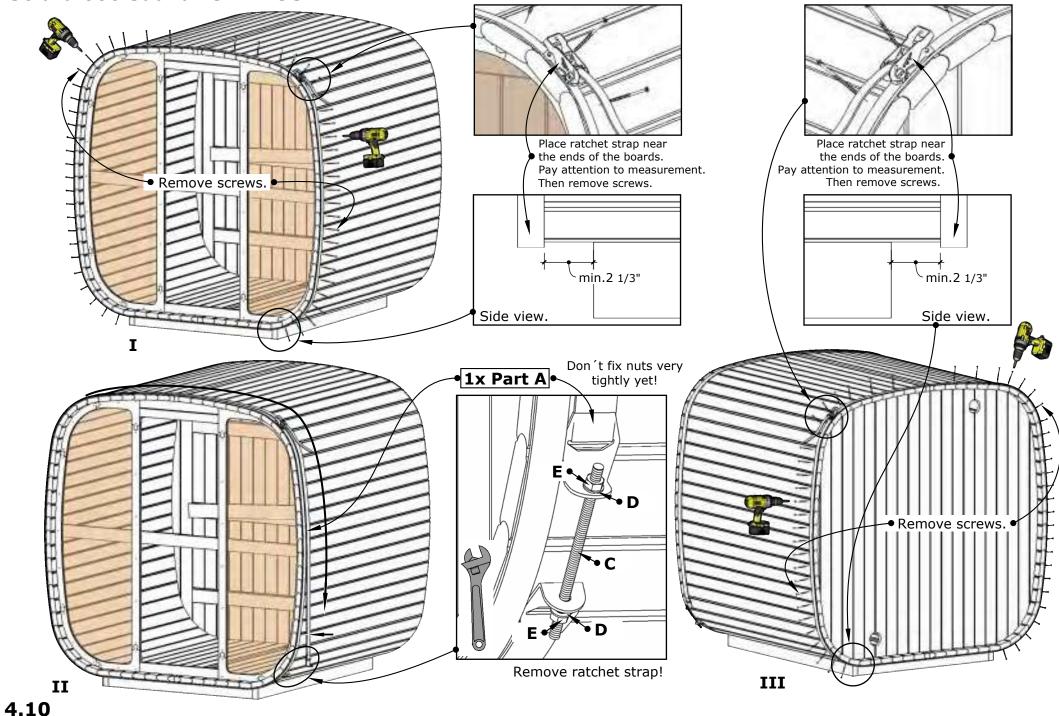


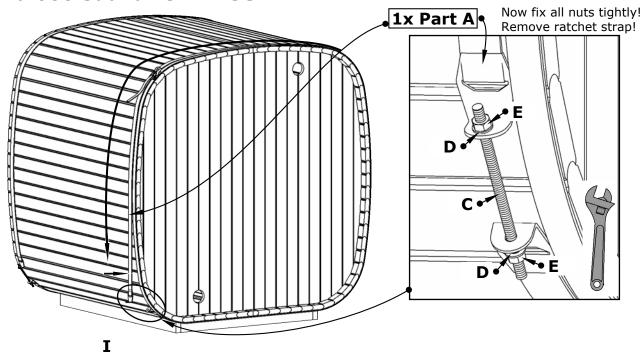

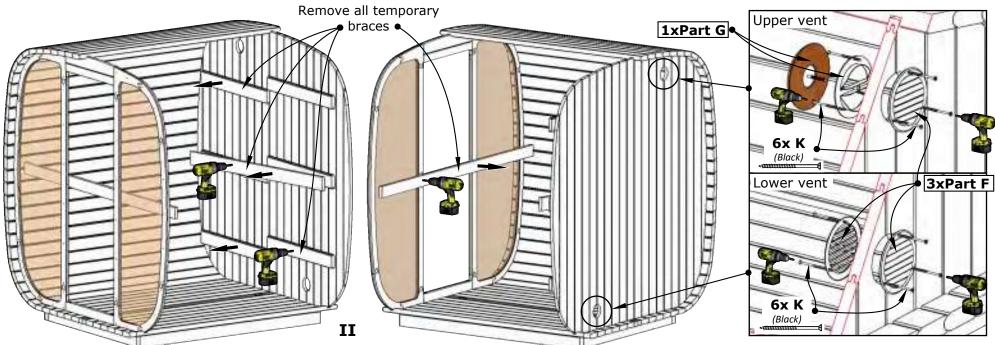

4.11

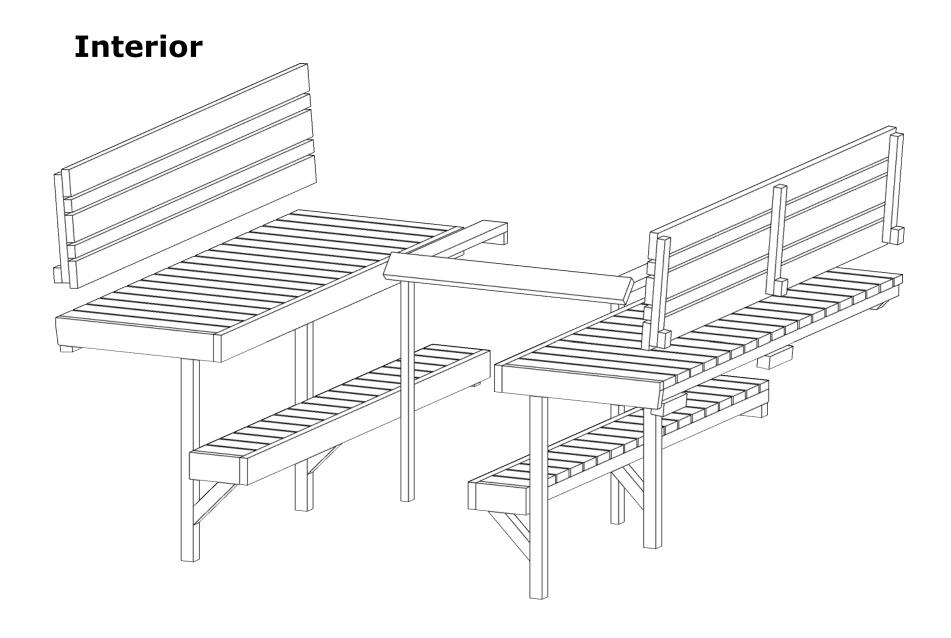


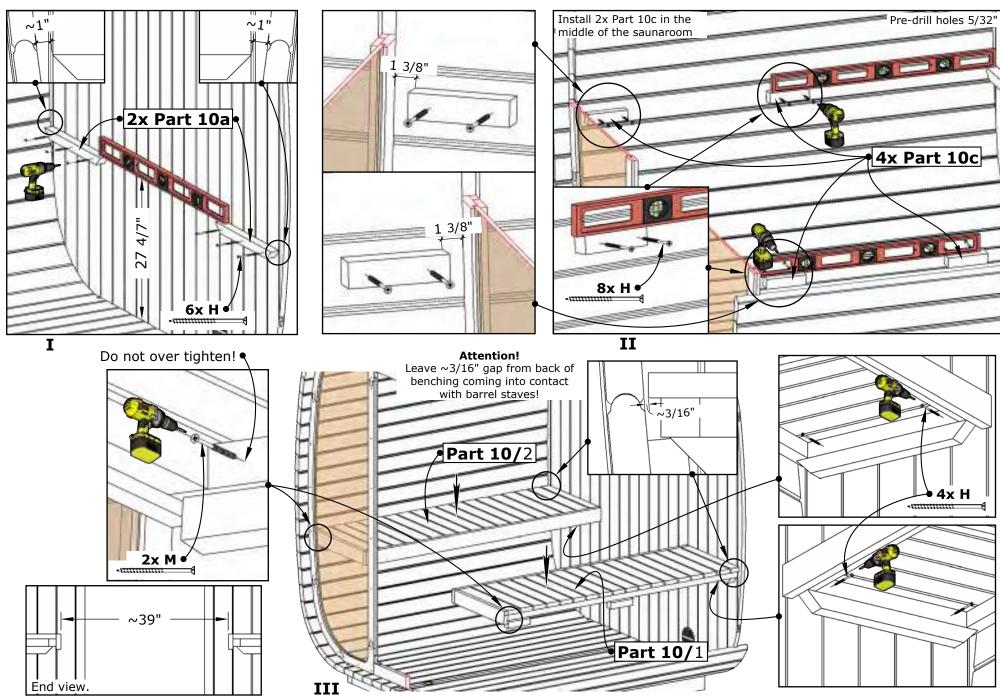



Solara 600 Sauna 79D" x 93H" Use waterlevel Pre-drill holes 5/32" Front view Front view → 4x Part 11a 2x Part 10c 4 1/2" 4 1/2" 3/5" 3/5" 18 18 2 1/3" 2 1/3" ● 12x H ● Pre-drill holes 5/32" Pre-drill holes 5/32" 2x H • • 2x H Part 11/2 Pre-drill holes 5/32" Pre-drill holes 5/32" Part 11/1 **•** 2x M 2x M • 4x H € 🤏 4x H •4x Part 11b

II


4.14

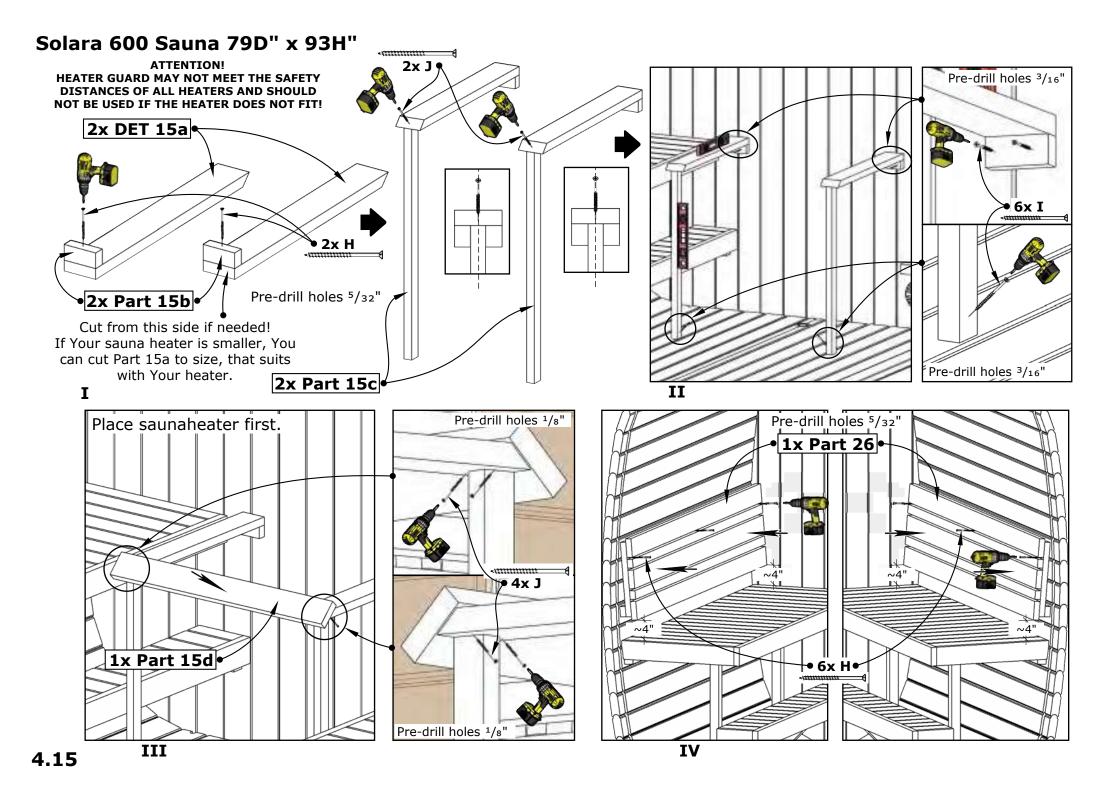


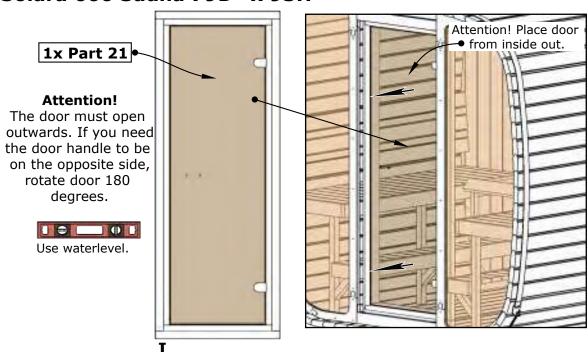


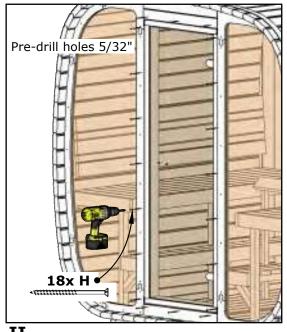



II

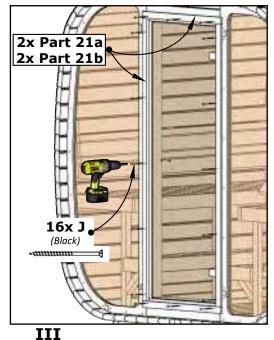


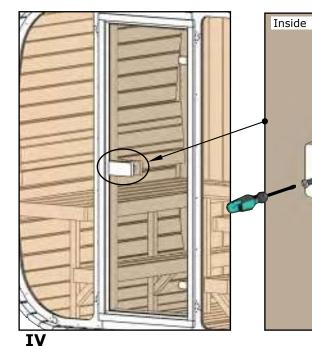


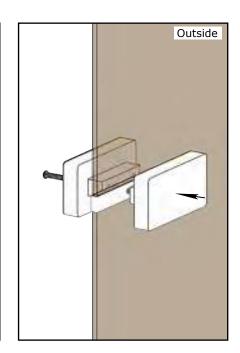


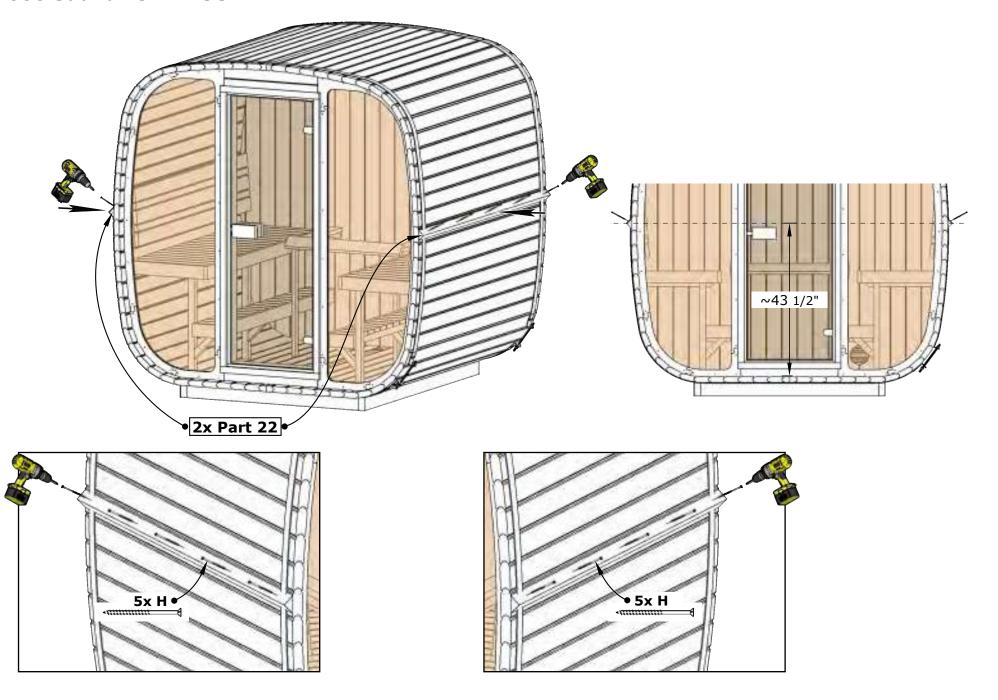


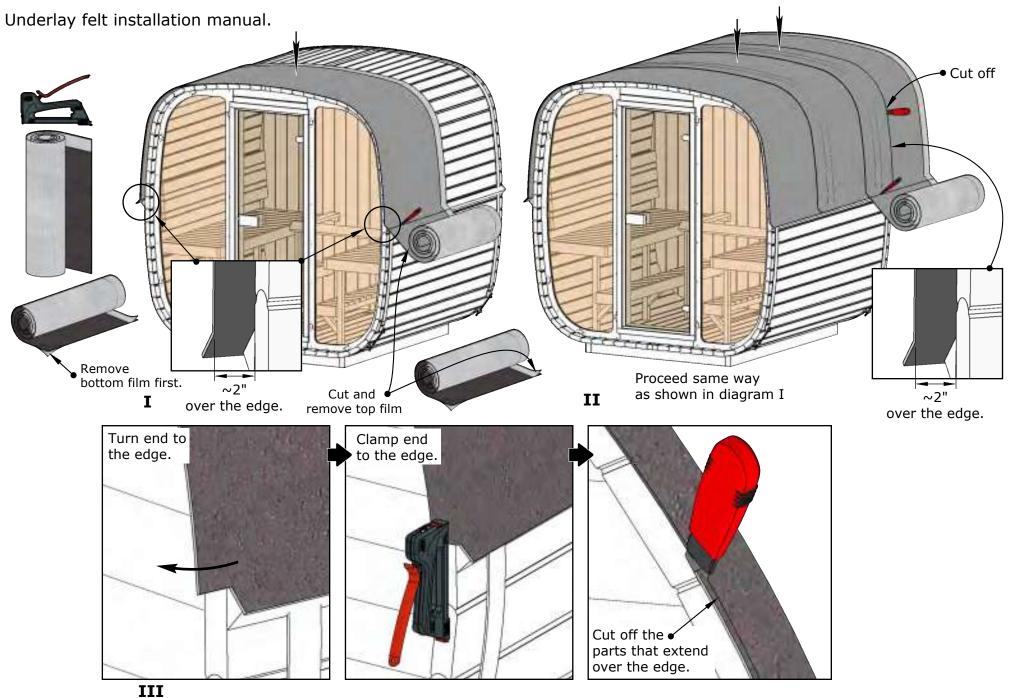

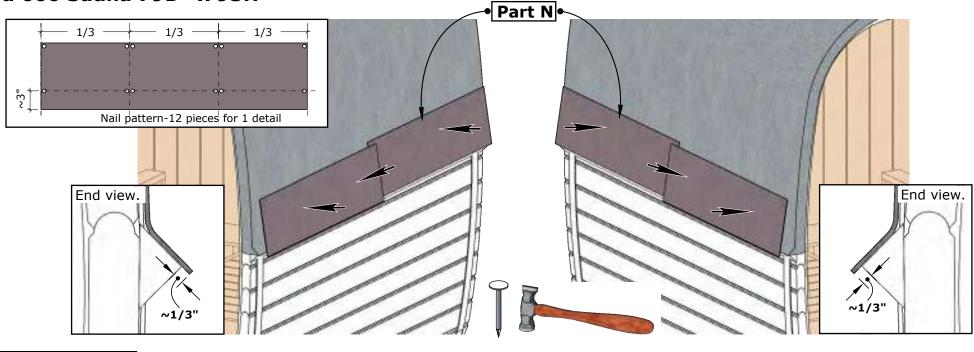

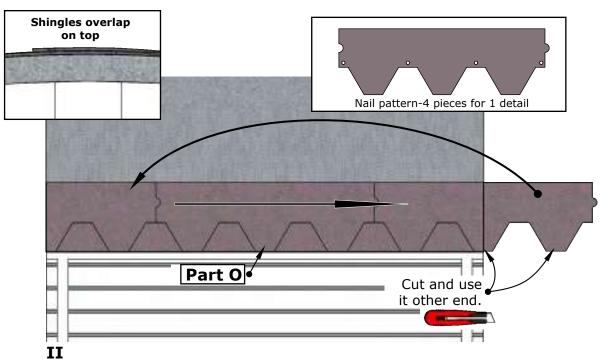

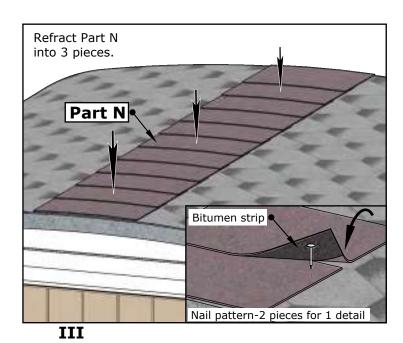

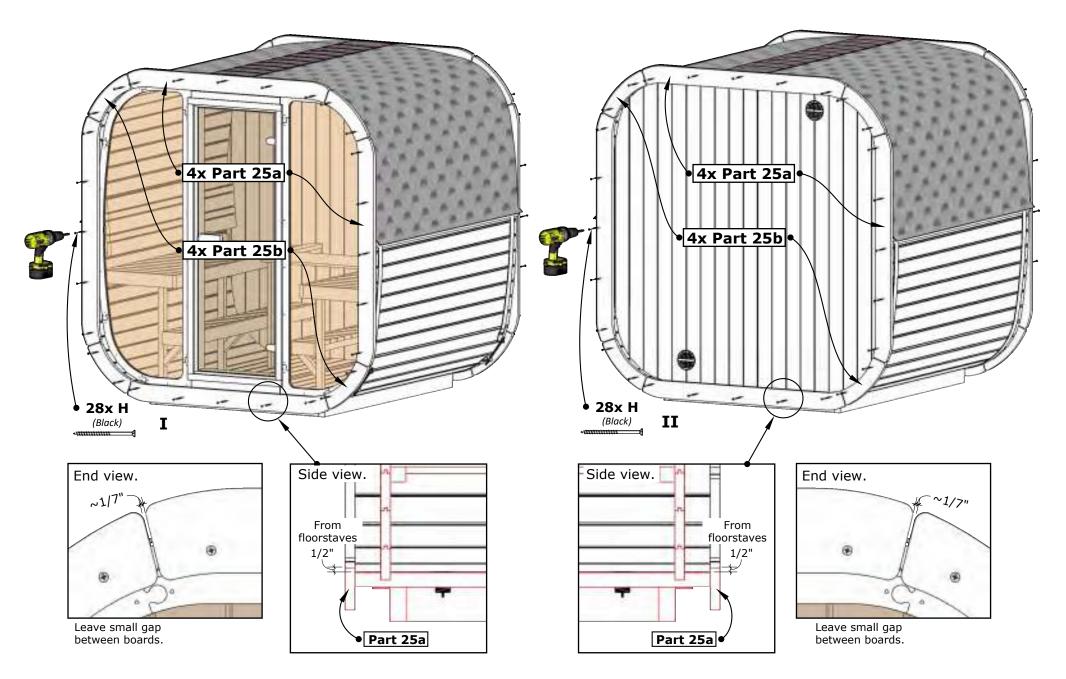

Installation Instructions

When building a wooden product, it is important to follow all installation instructions to ensure the quality and durability is guaranteed.

Important!

Identification number of the Product / Serial Number: 123456789

Must be accompanied by the serial number to identify the product.


General Installation

- Careful handling: Treat all wooden parts with care during assembly to avoid scratches or friction.
- **Level foundation:** Ensure the sauna sits on a stable, level foundation for proper door and window operation. Ensure the base has enough stability to support the sauna.
- Proper drainage: Avoid constant water exposure to wooden materials.
- **Electrical and plumbing:** Hire qualified professionals for electrical work, including heater and lighting installation.
- Wood treatment: To ensure optimal performance and longevity of your Sauna, proper
 wood treatment is crucial. We strongly recommend treating all wooden components with a
 wood preservative. This includes unfinished skirting boards, if applicable, which should be
 treated immediately upon assembly.

Door and Window Maintenance

• **Regular checks:** Regularly inspect window and door hinges and locks. Tighten loose components and lubricate as needed.

DOOR ADJUSTMENT INSTRUCTIONS

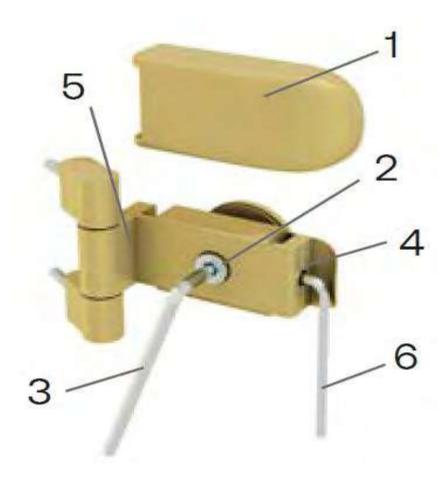

• You will need 3-mm (6) and 5-mm (3) hexagon keys for adjusting the hinges. Remove the plastic covers from the hinges (1). Loosen the fixing screws (2) one turn (do not remove the glass). If needed, the door can be shimmed up a bit from here vertically. If it needs to be adjusted left or right, turn the screws (4 & 5) as required. If one screw is turned counterclockwise, the other must be turned clockwise. Make sure both screws are tight when you have completed this step. Then tighten the fixing screws (2) when adjusted.

Wood Protection and Maintenance

- **Protective coating:** Apply a wood preservative at least once a year (or more often) to improve resistance to dirt and moisture, make cleaning easier, and extend the lifespan of the product.
- Adjusting wick condition: Check and adjust the condition of the sauna's wicks (if applicable) a few times a year.

Sauna Heater and Stones

- **Heater and chimney installation:** Follow the manufacturer's instructions for heater and chimney installation.
- Adjusting Metal Sauna Straps: Check and adjust the metal sauna straps (if applicable) a
 few times a year.
- Cleaning heater stones: Wash new stones before placement to remove dust and chemicals.
- **Stone placement:** Arrange stones according to the manufacturer's instructions, ensuring heating elements are not exposed.
- **First heating:** The first heating must take place under supervision for two-hours to a temperature of about 210°F. The sauna must be well ventilated both during and after heating. This allows the wood to absorb finishing materials and form a protective layer.

Sauna Use

- **Firewood:** Use dry firewood up to 12" long for wood-burning heaters.
- Water Throwing: Throw water only on the heater, not on walls or benches.
- **Swimwear:** Avoid wearing swimwear in the sauna to prevent damage to the benches from dripping water.
- **Seating comfort:** Consider using seating pads for increased comfort on hot benches.
- Cracked stones: Check the heater stones regularly, as they can crack over time. Replace
 or add stones as needed.

Sauna Cleaning After Each Use

- **Wipe down benches:** Use a clean, damp cloth to wipe down the benches. Do not use running water to clean the bench or other wooden surfaces.
- **Cleaning products:** Use suitable cleaning products specifically designed for sauna benches and other wooden parts.
- Drying and ventilation: After cleaning, allow surfaces to dry completely and ensure proper ventilation. Run the heater for at least 30 minutes with the vent open and door/windows closed.

Sauna Maintenance - Yearly

- **Wood treatment:** Re-treat wooden surfaces with a suitable product, especially for frequently used saunas.
- Cleaning surfaces: Clean all surfaces with a soft brush/cloth and a designated cleaning agent according to the product's instructions.

- Heavy stains: For stubborn stains, lightly sand the area before re-treating with wood preservative.
- **Avoid unsuitable products:** Avoid paints, varnishes, harsh disinfectants, or pressure washers, as these can damage the wood.
- **Hardware checks:** Inspect bench and support mountings. Tighten loose screws if necessary, as wood can loosen due to heat and moisture fluctuations.

What to Avoid in Your Sauna

- **Drying textiles:** Avoid drying textiles in the sauna due to fire hazards and potential wood damage from excessive moisture.
- **Excessive heat:** Don't exceed the maximum temperature specified by the heater manufacturer to prevent fire hazards and wood warping.
- **Cleaning methods:** Avoid using pressure washers or excessive running water, as this can permanently damage the wood structure.

Wood Characteristics in Saunas

- **Natural changes:** Wood is a natural material that may crack or warp slightly due to temperature fluctuations. This is normal in saunas with extreme temperature and humidity changes.
- **Deformation factors:** The risk of wood deformation depends on the material, usage intensity, and is more noticeable with wider boards.
- Darkening wood: Wood in areas exposed to hot steam may darken over time.
- Wood Smell: Thermally treated wood has a characteristic smell that diminishes over time
 but does not completely disappear. In a sauna, the smell weakens faster if it is heated for a
 long time and aired at the same time. The smell is softened by treating the wood with a
 suitable wood oil or wood care product. Do not wash untreated thermal wood with water, as
 this will make the smell stronger.